

# Anziehvorschrift Zylinderkopf

## Tightening Instructions for Cylinder Head

## Instructions de serrage pour culasse

## Prescripciones de apriete para culatas

357.831

passend für / suitable for  
adaptable à / adaptable a


MAN




Das Original

Schraubenkopf / Head shape  
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

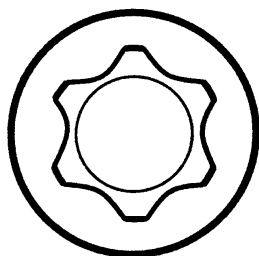

848.830  
M 18x2x246

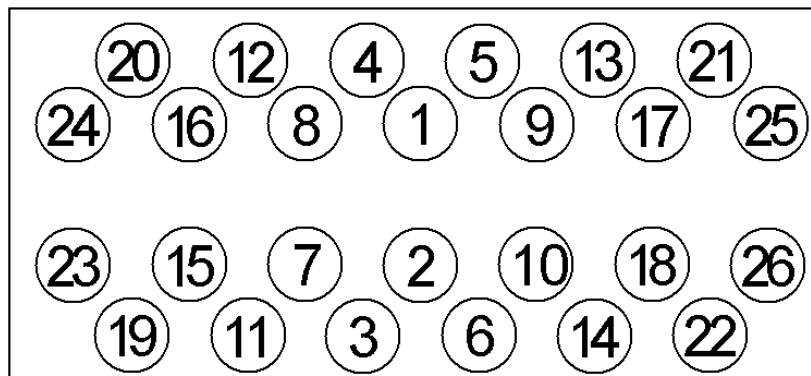

Anziehen/  
Tightening/  
Serrage/  
Apriete

- 10 Nm
- 150 Nm
- 300 Nm
- 90°
- 90°
- 90°

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

## Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. D2676

Ø 127 mm

## Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/11/12

**\*357.831\***