

# Anziehvorschrift Zylinderkopf

# Tightening Instructions for Cylinder Head

# Instructions de serrage pour culasse

# Prescripciones de apriete para culatas

219.612

passend für / suitable for  
adaptable à / adaptable a


Renault



Das Original

Schraubenkopf / Head shape  
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

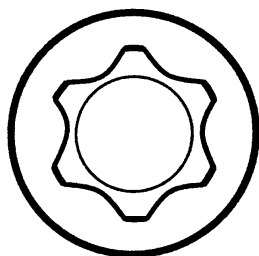

759.371

M10x107,5x1,5


+M10x93x1,5

Anziehen/  
Tightening/  
Serrage/  
Apriete

- 20 Nm
- 100°
- 3 min
- Pos. 1,2:  
20 Nm + 110°
- Pos. 3-6:  
20 Nm + 110°

Pos. 7-10:

- 20 Nm + 110°

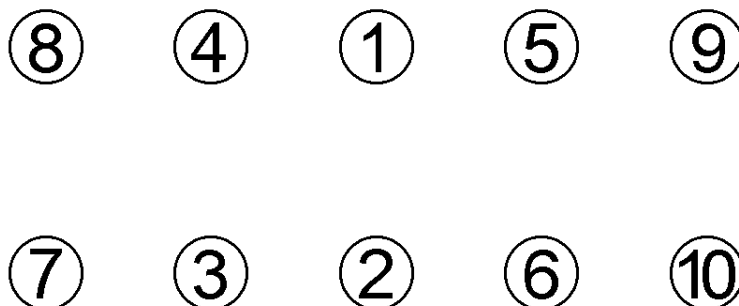

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

## Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 80 mm; ÷: 1,27 mm

Mot: K7M 702,703,704,710,720,744,745,746

K7J 700,701

1,6 Ltr. 55 - 66 KW

Clio,Kangoo,Megane

### Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/11/12

**\*219.612\***